



Drop Down Rail

HRK255

Ligature Resistant Drop Down Rail

Description

The AquaDesign Drop Rail is a sturdy hinged arm that can be locked in the upright position when not in use. Manufactured from heavy gauge steel for maximum strength and powder coated for extra comfort and for matching or contrasting to the surroundings.

Installation

- Place the drop rail unit on the wall and mark for the screws.
- Drill holes for the screws and insert suitable plugs (not supplied).
- Install the drop rail in place using the security screws provided.

Operation


- Ensure that you and others are clear of the rails drop path.
- Please ensure that rails are supported whilst unlocking with the key by holding the tab located at the top of the rail.
- Carefully lower the rail into place.

To return and lock the rail

- Ensure that the area of the rail is clear.
- Lift the rail and support in the returned position by holding the tab whilst locking.
- Carefully check that the lock has engaged by gently pulling the tab at the top of the rail. (If the rail begins to lower, repeat the locking procedure whilst supporting the rail).

Maintenance

| | |
|--------------------------|--|
| 001 | Base Model Number (must specify) |
| <input type="checkbox"/> | HRK255 Ligature Resistant Drop Down Rail |

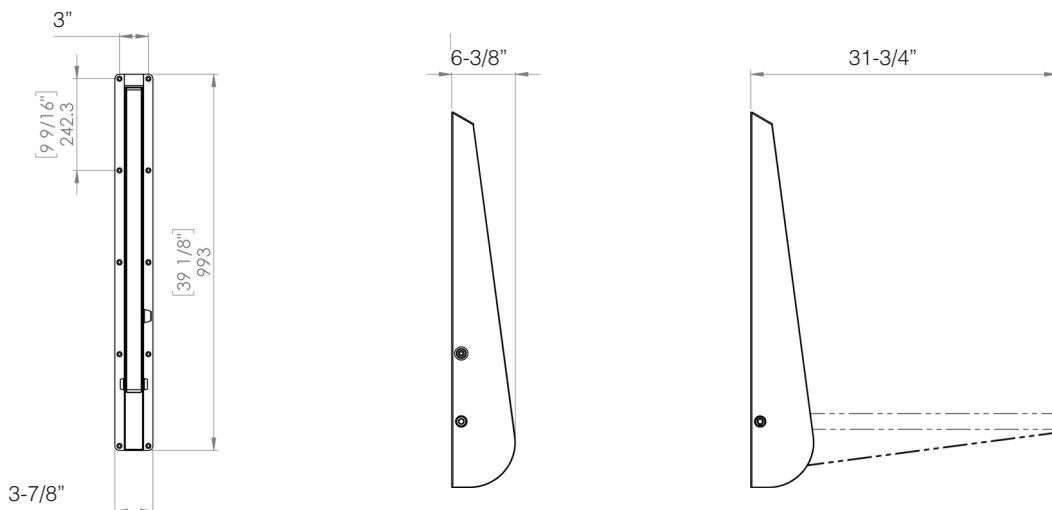

WARNING: Cancer and Reproductive Harm
www.P65Warnings.ca.gov



In the absence of a legal or industry definition of anti-ligature or ligature resistant products, when we use these terms, we are referring to products that are designed and manufactured with the intention of reducing the risk of ligature attachment to the product(s). PSD LLC will always endeavour to design and test our anti-ligature product(s) to reduce the risk of product ligature attachment that may result in serious injury or death. Whilst all reasonable measures are taken at the time of design, the anti-ligature design of the products are not intended to and will not:

- a. Replace protective measures that need to be taken in the specific circumstances of usage;
- b. Substitute the need for supervision of those who may be at risk;
- c. Protect and or prevent those at risk against any self-harm instances that may occur when installed; and
- d. Protect and or prevent injury when the risks where unknown to us at the time of the design of the product(s).

PSD LLC does not offer and do not represent or warrant that any product(s) for sale that are ligature-free. Therefore, PSD LLC will not be liable for any claims, loss, or damages arising from ligature attachment on our products. It is the purchaser's responsibility to ensure that products purchased and installed are suitable for the environments in which they are installed, and suitable supervision and protective measures are in place to protect those at risk. Whilst all reasonable care has been taken in compiling the information in this document, the designs, dimensions and products shown are indicative only and should not be relied upon without our prior approval. Due to our policy of continuous development, we reserve the right to alter any details of specifications or products without notice. All information, drawings, technical specifications and product designs remains the property of PSD LLC.