



INSTALLATION INSTRUCTIONS

SAH01-054



Behavioral Healthcare Clothing/Towel Hook

The hook SAH01-054's anti-ligature properties perform when load is applied in a downward vertical direction (A) within the illustrated boundaries (B), not if loaded sideways or upways.


- The hook shall be mounted with safety screws with a flat bottomed head. The head's diameter should be from 9.5 to 10 mm to fit the counter-sunk hole. The diameter of the screw should not exceed 5 mm in diameter, which is the diameter of the holes. C-C between the holes is 28 mm.

When mounted, check that no objects, rope or string can be inserted between the hook and the wall. Uneven surfaces must be avoided.


- The hook should be mounted at a height of 165 cm and at a safe distance above cabinets, sinks, doors, shelves, etc. - See example 1
- The hook shall not be mounted close to any object such as a cabinet, sink, door, door frame, shelf, etc., which highest point is at the same level, just beneath or higher than the hook. Improper installation can lead to that a cord, string or rope can be attached to the hook and then pulled over the highest point on the second object and allow a possible suicidal act. -See example 2.
- The hook must not under any circumstances be mounted on any kind of door or side of a cabinet that has doors. Nor to a door frame that is protruding a wall or any similar arrangement. -See example 3.
- When mounting two or more hooks to the same wall examples 4 and 5 must be followed. When installing multiple hooks in a row, C-C may never be less than 20 cm. -See example 4.
- The hook shall not be mounted at different heights. -See example 5.

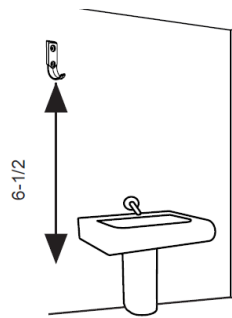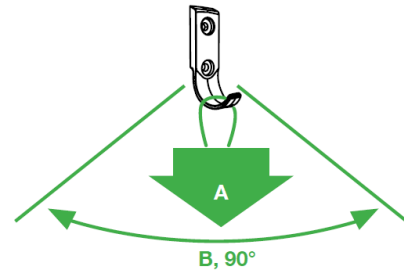


1, correct placement of hook.

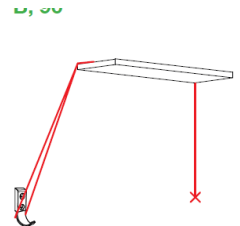


2, Incorrect placement of hook.

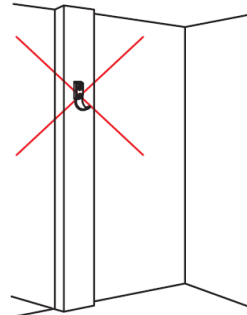

3, Incorrect placement of hook.



4. Correct, multiple hooks.



5. Incorrect, multiple hooks.



WARNING: Cancer and Reproductive Harm
www.P65Warnings.ca.gov

| | |
|------------------------------------|----------------------------------|
| 001 | Base Model Number (must specify) |
| <input type="checkbox"/> SAH01-054 | Behavioral Healthcare Hook |