



INSTALLATION INSTRUCTIONS




3-USER STREAMLAV VIEW

MODELS: SLV03-A

SLV03-B SLV03-BE

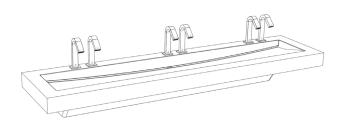

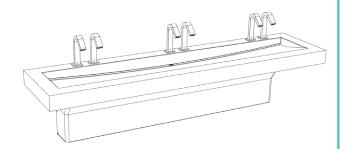


IMPORTANT

- Read the entire instructions entirely prior to installation.
- Prior to connecting the fixture to the water supply make sure that all the lines are flushed thoroughly.
 Debris in the lines can cause valves to malfunction and voids the warranty.
- All wall anchors should have a pull out strength of 1000 lbs or more. Choose the appropriate hardware and backing material for the type of wall on the premises.
- Units should always be installed according to local plumbing and/or electrical codes.
- Turn off all electrical power to the outlets in the vicinity of the lavatory system you're about to install. Power must remain off until installation is complete.



Top View




SLV03-A/B-L00R00




SLV03-A/B-L15R15


Front View



A-model (no skirt)



B-model (standard skirt)

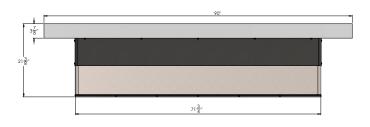


BE-model (extended skirt)


to conform with local and national codes.




Side View

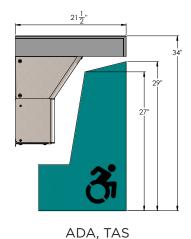



All Models

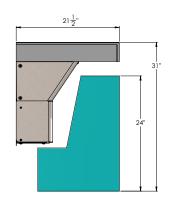

ADA - Juvenile Height All Models

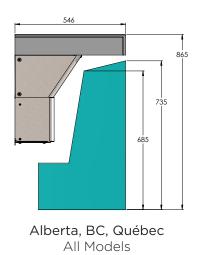

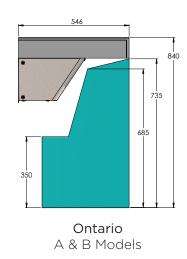


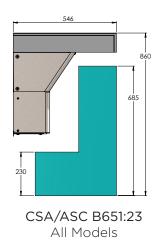

to conform with local and national codes.



Rough-In Dimensions SLV03-A (No Skirt Option)

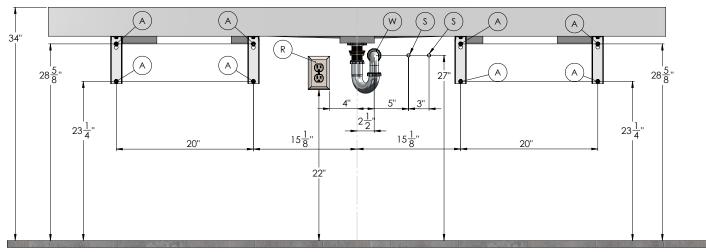

^{*} All vertical measurements are measured from the FINISHED floor


Code	Description
А	1/4" Anchors for support brackets with a pull out strength of min. 1000 lbs.
W	1-1/4" NPT Drain, stub out 2"
S	1/2" copper tubing for hot & cold supplies, stub out 2"
R	110V GFCI Outlet

Height Adjustments

Standard	Rim Height	Adjustment of height for A, B, W, S & R
ADA & TAS Adult	34"	None
ADA Juvenile, Ages 6-12	31"	Subtract3" to height in drawing
TAS, Grades 6 through 8 or 9	32"	Subtract2" to height in drawing
TAS, Pre-K through Grades 5 or 6	30"	Subtract4" to height in drawing



Rough-In Dimensions SLV03-B (with Skirt Option)

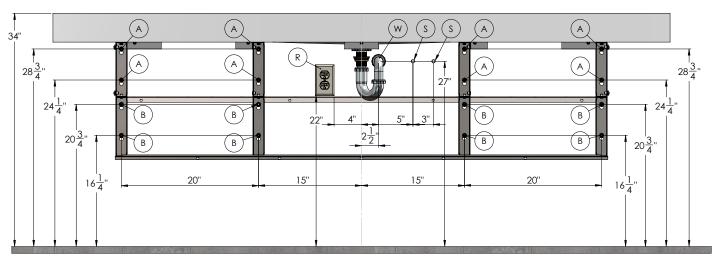

^{*} All vertical measurements are measured from the FINISHED floor


Code	Description
А	1/4" Anchors for support brackets with a pull out strength of min. 1000 lbs.
В	Only if skirt extension - 1/4" Anchors for support brackets with a pull out strength of min. 1000 lbs.
W	1-1/4" NPT Drain, stub out 2"
S	1/2" copper tubing for hot & cold supplies, stub out 2"
R	110V GFCI Outlet

Height Adjustments

Standard	Rim Height	Adjustment of height for A, B, W, S & R
ADA & TAS Adult	34"	None
ADA Juvenile, Ages 6-12	31"	Subtract3" to height in drawing
TAS, Grades 6 through 8 or 9	32"	Subtract2" to height in drawing
TAS, Pre-K through Grades 5 or 6	30"	Subtract4" to height in drawing



Rough-In Dimensions Omnia Optrion

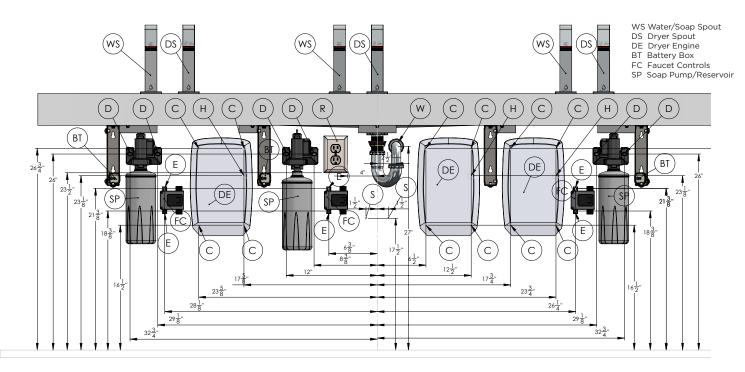

- * All vertical measurements are measured from the FINISHED floor
- ** Use dimesions of page 4 or 5 for location of mounting bracket anchors


Code	Description
С	1/4" anchors for dryer engine
D	1/8" anchors for soap pump
Е	1/8" anchors for water controls
W	1-1/4" NPT Drain, stub out 2"
S	1/2" copper tubing for hot & cold supplies, stub out 2"
Н	Hardwire location for dryer engine
R	110V GFCI Outlet

Height Adjustments

Standard	Rim Height	Adjustment of height for A, B, W, S & R
ADA & TAS Adult	34"	None
ADA Juvenile, Ages 6-12	31"	Subtract3" to height in drawing
TAS, Grades 6 through 8 or 9	32"	Subtract2" to height in drawing
TAS, Pre-K through Grades 5 or 6	30"	Subtract4" to height in drawing




Step 1: Rough-In

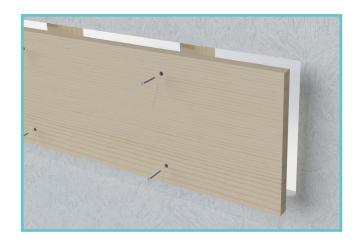

Reinforce the wall with 3/4" plywood in case you cannot install anchors with a 1000 lbs. pull-out strength.


Anchor the plywood to the studs in the wall. It is recommended to anchor it at least one stud to the left and right of the fixture.

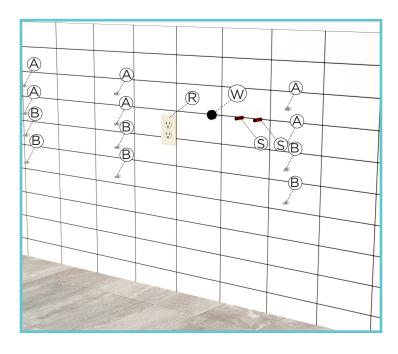

- Rough in the ½" copper supply tubing through the wall at the locations marked with
 S on the rough-in drawing on page 4 or 5.
- Rough in the 1-1/4"drain connection through the wall at the location marked with W on the drawing on page 4 or 5.
- When using faucets with plug-in transformer(s): rough-in the GFCI electrical outlet at the location marked with R on the drawing on page 4 or 5.
- Install four 1/4" anchors on the locations marked with A on the drawing on page 4 or 5.
 The anchors should have a pull-out strength of 1000 lbs.




Step 2: Mount the Fixture

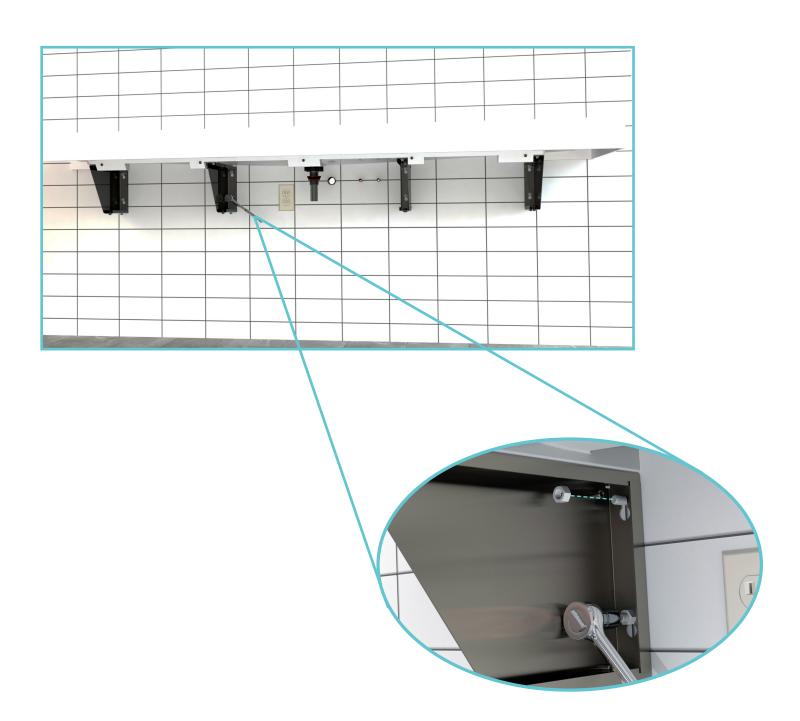



Step 3: Install the P-trap

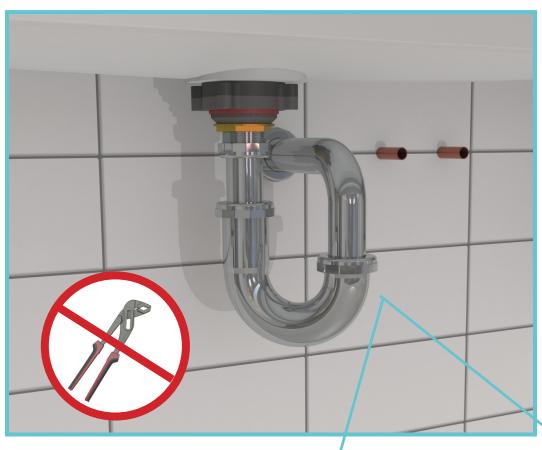




to conform with local and national codes.

Page **9** of **14**





Step 4: Install the Skirt (B-Models Only)

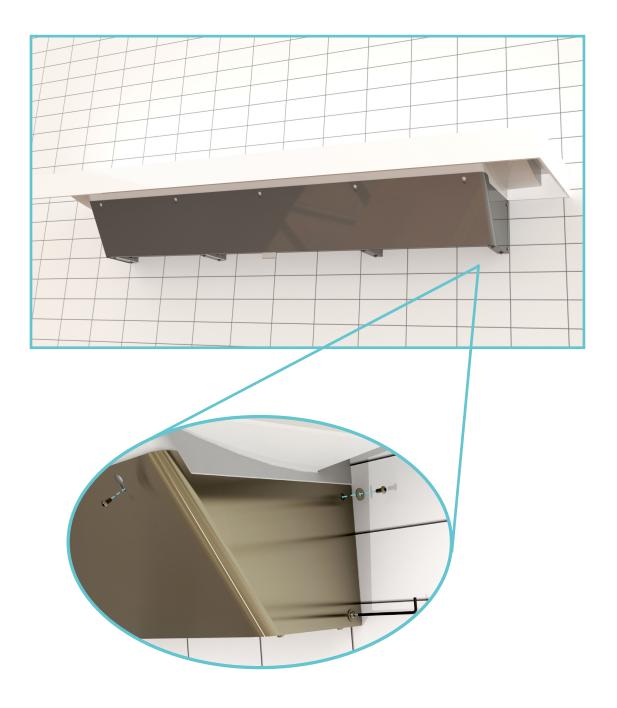



Step 5: Install the Bottom Plate (B-Models Only)

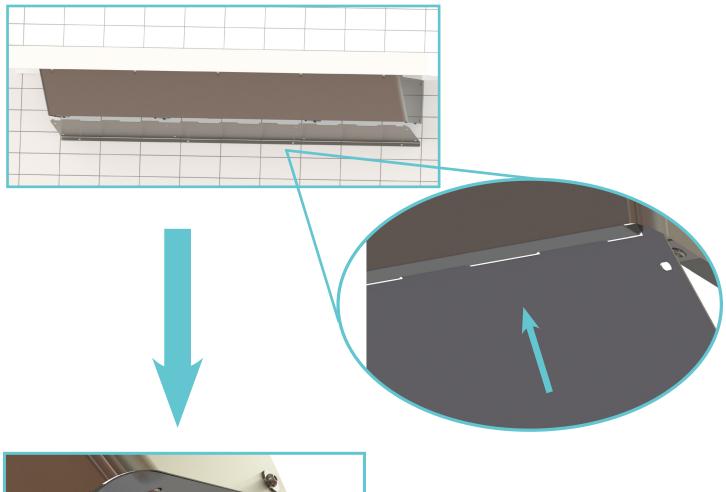


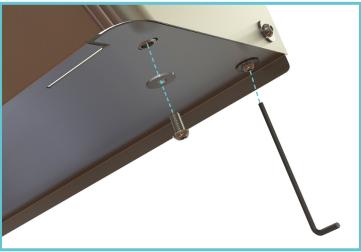

All information including dimensions, changes in design and material are subject to manufacturer's change without formal notice




Step 6: Install the Extended Skirt (optional)

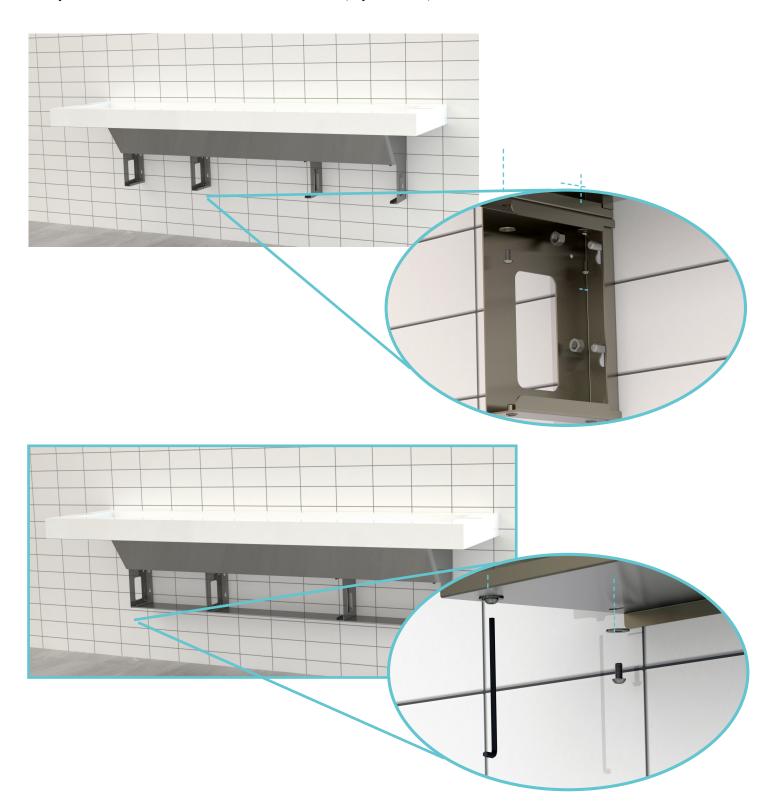



Step 6: Install the Extended Skirt (optional) - Continued

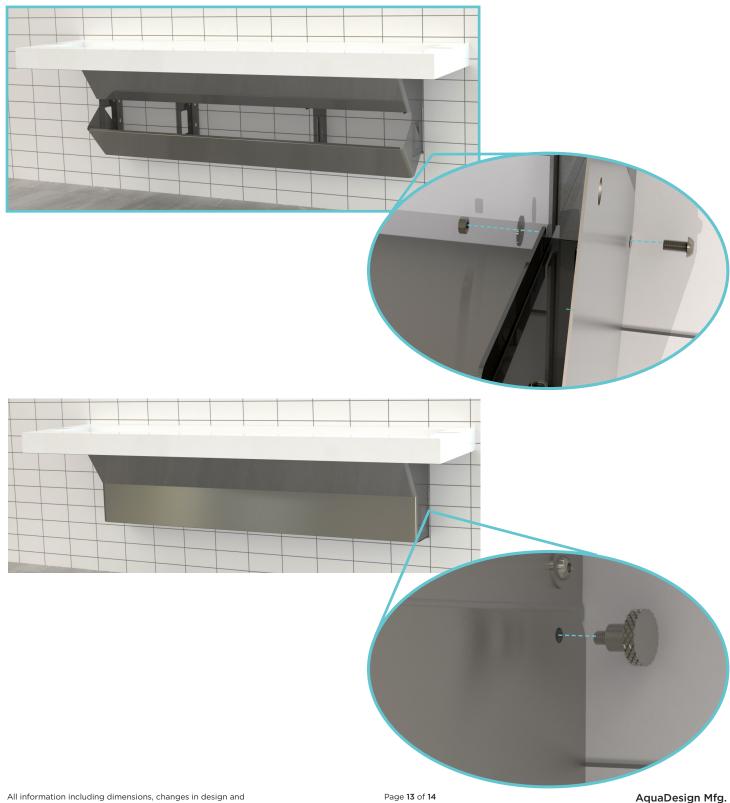

All information including dimensions, changes in design and material are subject to manufacturer's change without formal notice and without obligation. AquaDesign Mfg. assumes no responsibility for use of superseded or voided information. Verify all rough-in information before installation. It is the responsibility of the installer to conform with local and national codes.

Page **13** of **14**

info@AquaDesignMfg.com Phone: (800) 999-3101



MAINTENANCE

Solid Surface Bowl

AquaDesign's solid surface material is made of acrylic modified polyester resins, aluminum trihydrate fillers and color granules. This synthetic compound material has an elegant granite-like appearance. It is not only virtually indestructible and easy to maintain, but equally matches perfectly from an aesthetic viewpoint, this resulting in a remarkable design with soft, rounded shapes, ideal for the public washroom.

- Daily care: wipe the surface with soapy water or a damp cloth.
- Surface staining: clean the surface with soapy water or ammonia based cleansers.
- Stubborn stains and superficial scratches: clean the surface with an abrasive cleanser and a wet sponge. You can also use a green Scotch Brite© pad.
- Stubborn scratches: sand with 400 grit sandpaper and then clean with an abrasive cleanser and a green Scotch Brite© pad.
- AVOID contact with harsh chemicals such as drain cleansers and paint removers.
- AVOID contact with hot pots or heat producing appliances.

Stainless steel panels

Things to Avoid

- AVOID scouring a Stainless steel surface across the satin finish lines. Scouring across the satin finish lines can damage the original Stainless steel grain finish. Never use an abrasive scouring pad.
- Don't allow liquid soap or other household cleansers to dry on the Stainless steel surface. Most brands contain chemical additives, which will affect the finish.
- Never leave solutions of chlorine bleach and water on your Stainless steel surface for extended periods
 of time. Chlorides, which are found in most soaps, detergents, bleaches, and cleansers, are very
 aggressive to stainless steel. If left on too long they can cause surface pitting.
- Don't use a steel wool pad to clean your Stainless steel. Steel wool pads have a tendency to break apart and small particles of steel can become embedded in the surface of the sink. The steel particles will rust and will give the appearance that the Stainless steel itself is rusting.
- Never leave wet sponges, cloths, or cleaning pads on the Stainless steel surface. This can lead to surface rust.

Things to Do

- Rinse or clean surface after use. Clean with warm, soapy water.
- Avoid caustic chemicals. Avoid exposing your appliance to strong chemicals, such as paint removers, oven cleaners, etc. If contact occurs, quickly flush the surface with water.
- Follow the grain. When cleaning the Stainless steel surface of your sink, be sure to rub in the direction of the grain finish lines.

All information including dimensions, changes in design and